

# Operation Instruction

## Insert / Holder

### USB Insert / Earphone Insert

Turning height adjuster screw to best location for inserting USB jack / Earphone Insert ( Fig 1.1 & 1.2)

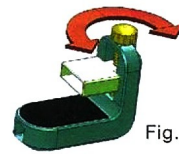


Fig. 1.1

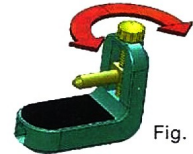


Fig. 1.2

### iPad Power Jack Holder

Step 1: Insert iPad power jack onto jack holder ( Fig 2.1).  
For iPad Mini and iPad air, please hook the jack size adjuster onto the cable to sit above power jack and slide it onto jack holder ( Fig 2.2)

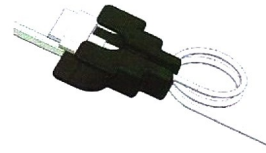


Fig. 2.1



Fig. 2.2

Step 2: Insert power jack into iPad ( Fig 2.3) and slide jack holder onto iPad to secure ( Fig 2.4)

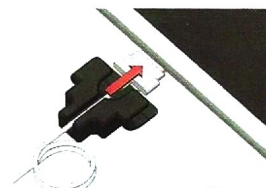


Fig. 2.3

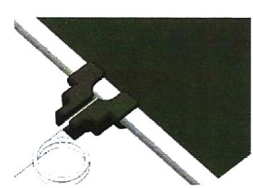


Fig. 2.4

## Clamp

### Master Clamp Assembly

Based on the thickness of your ultrabook, slide M1 into M2 notch to make the appropriate hold your device tightly. ( Fig 3)

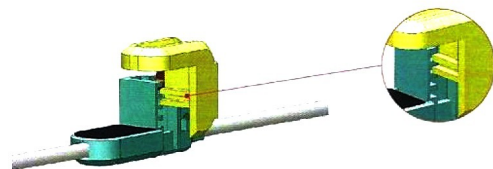


Fig 3

### E-Clamp

Turning height adjuster screw to best height for inserting earphone jack ( Fig 4)

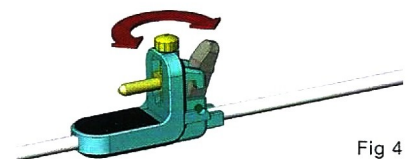


Fig 4

### Locking your device

Step 1: Slide Master clamp or E-Clamp (Earphone Clamp) onto the device, pull cable to secure both clamps on the device and push down the silver lever to lock in position ( fig 5.1 & 5.2)




Fig 5.1




Fig 5.2

Step 2: Push down lock button ( Fig 5.3) and slide combination code unit onto Master clamp, release lock button.



Fig. 5.3



Step 2: Turning number wheel randomly to lock

### To set personal combination code

- Factory pre-set code 0-0-0-0
- At unlock position, push and hold down set button ( Fig 6), while turning the number wheel to your desired code. When number is set, release the combination set button

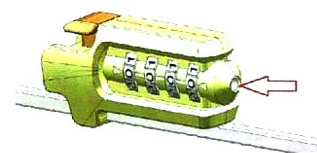


Fig 6